


Quick Entry to "Cascade" Configuration Option

Press **ESC** **ESC** "Function General" will be displayed

If "Function Cascade Control" is displayed, press **↓** or **↑**

Until "Function General" screen. Then press **↵**

Press **↓** or **↑** until Access Level screen is visible then press **↵**

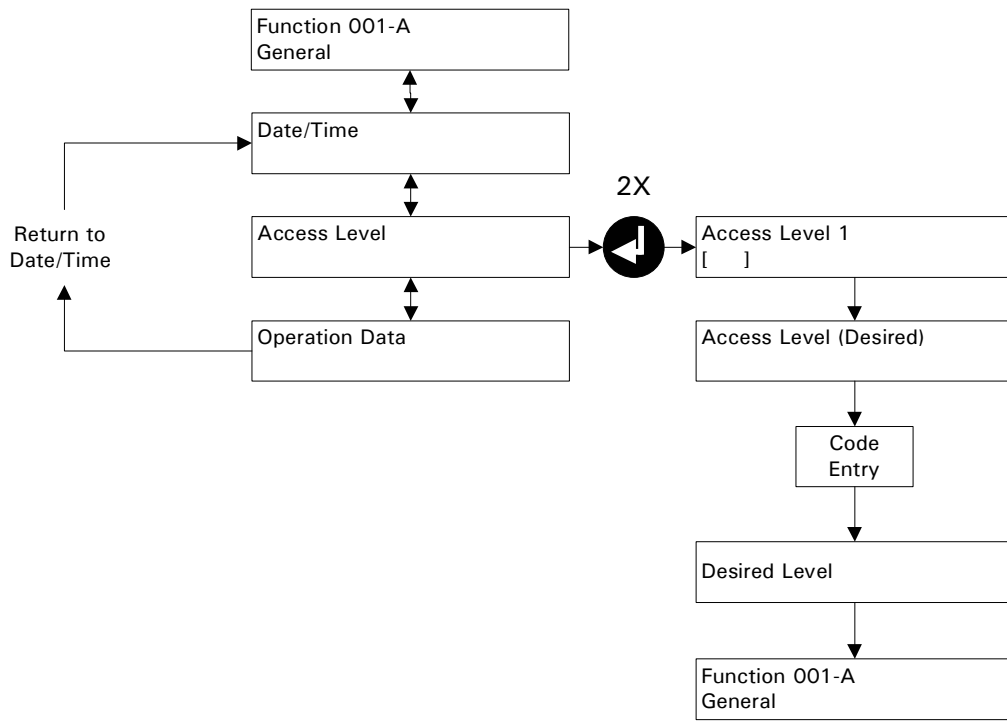

Press **↵** current access level will flash in display


Enter access codes for desired level

↑ **↓** **ESC** **↵** Access level 2

↓ **ESC** **↵** **ESC** Access level 3

Press **ESC** **ESC** to exit into desired level

Press **↓** or **↑** until Cascade Control screen is visible then press **↵**

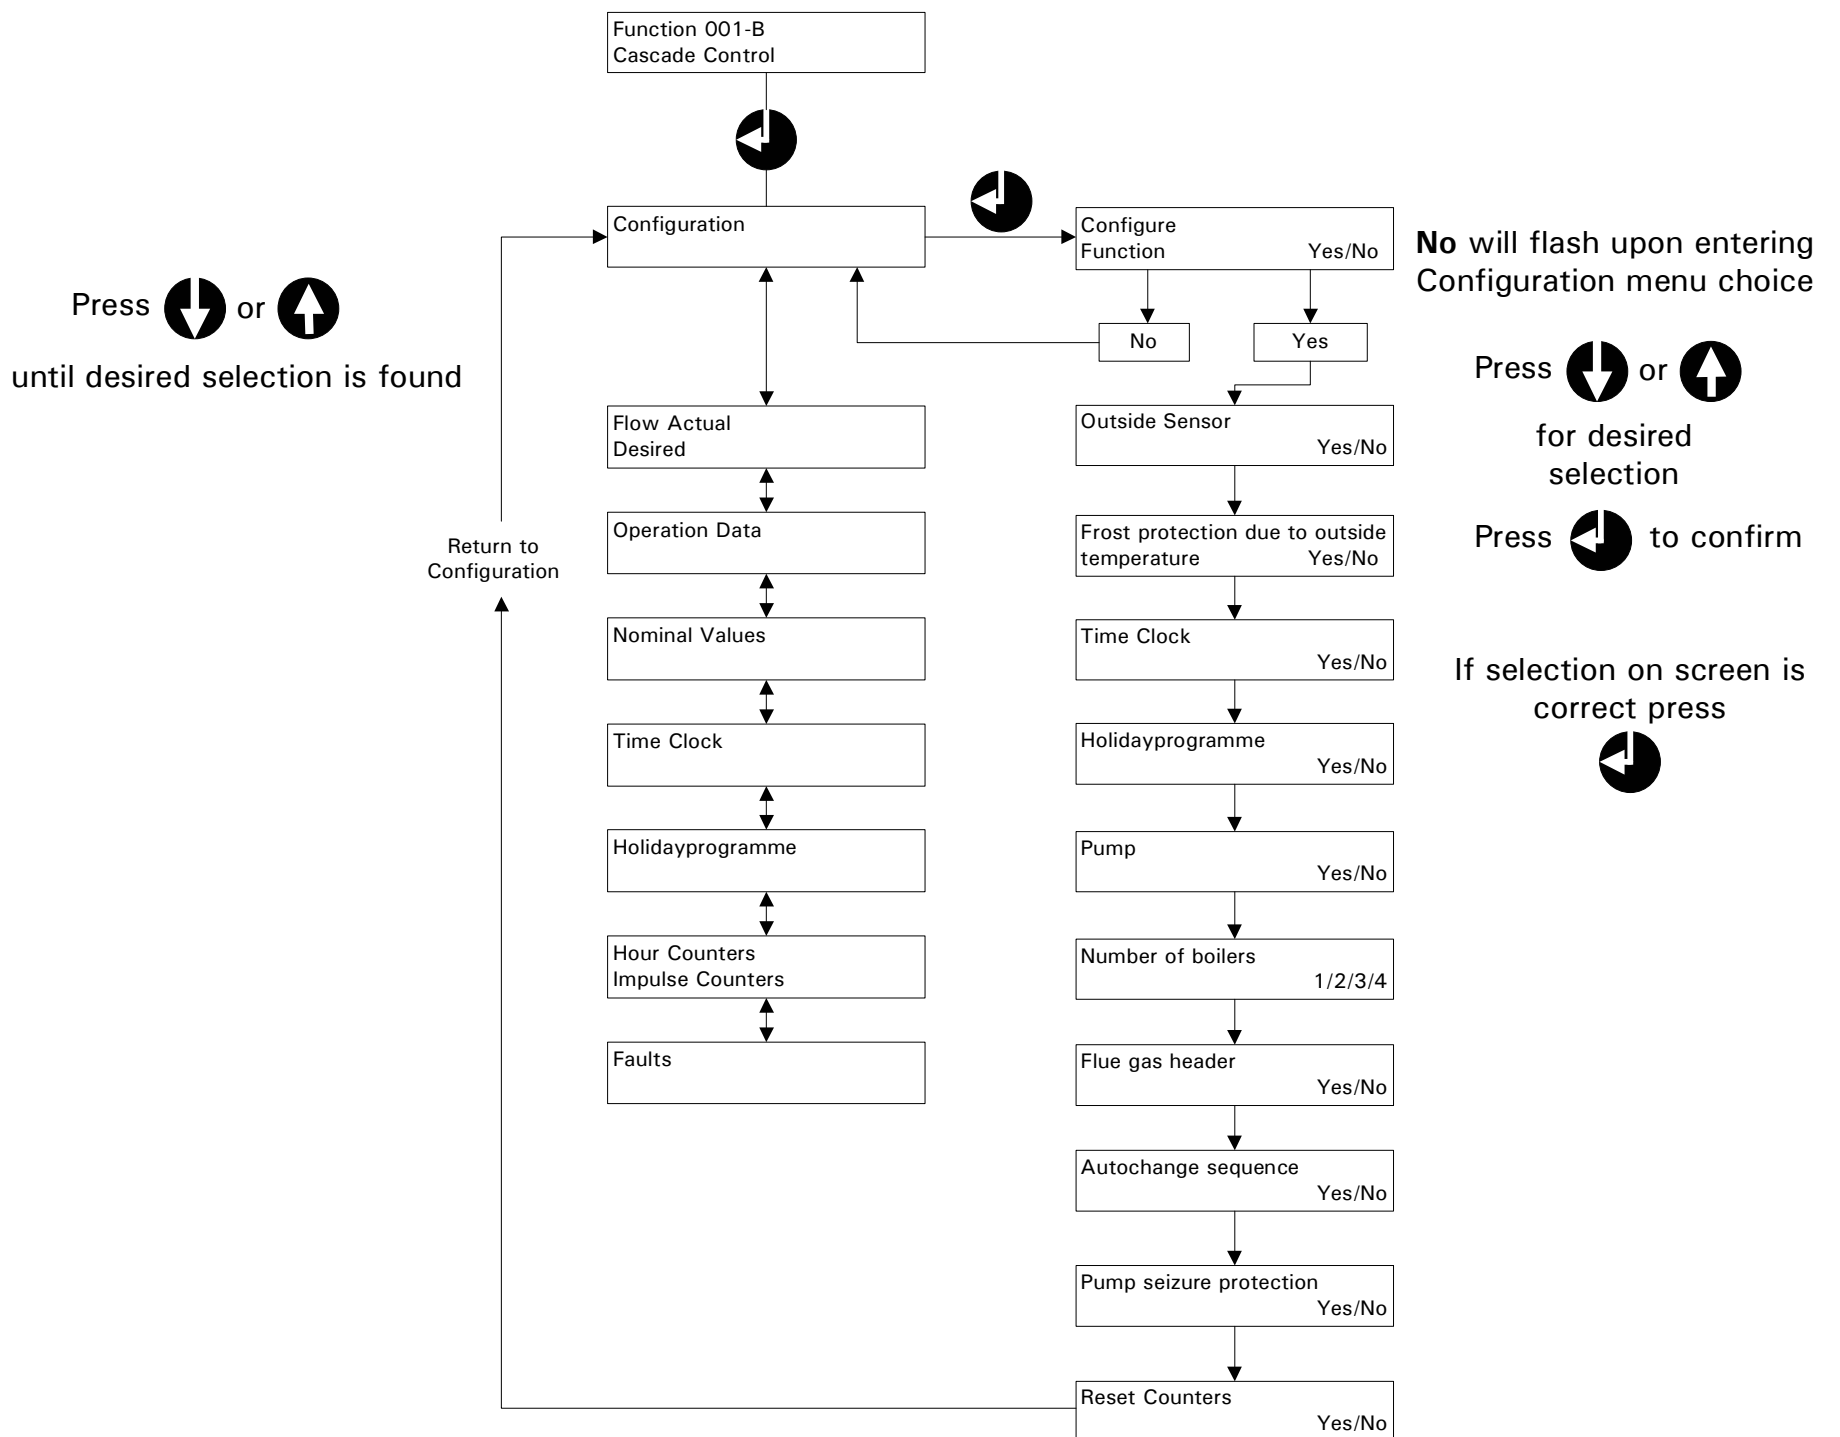

No will flash upon entering Configuration menu choice

Press **↓** or **↑** for desired selection

Press **↵** to confirm

If selection on screen is correct press **↵**